OLIGHT
USER MANUAL

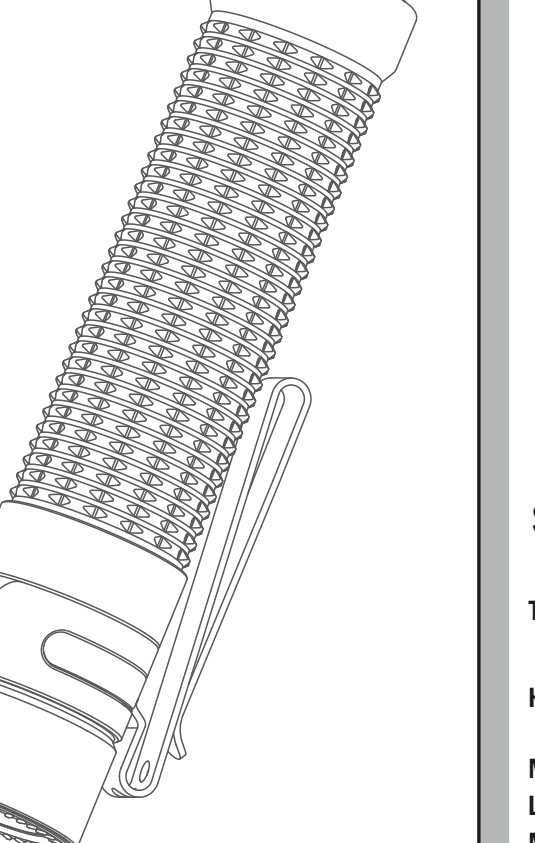

WARRIOR Mini

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

IN THE BOX

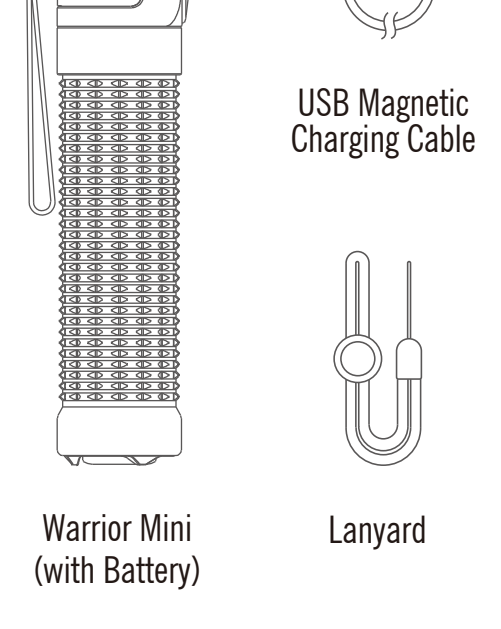

SPECIFICATIONS

Mode	Output	Runtime
TURBO	1500lumens	100% 4mins → 33% 205mins → 11% 55mins
HIGH	500lumens	100% 218mins → 34% 50mins
MED	120lumens	18h
LOW	15lumens	150h
MOON	1lumen	45days

	TURBO	HIGH	MED	LOW	MOON
Distance	190m	110m	54m	18m	—

Impact resistance	Peak intensity	Waterproof
1.5m	9,025cd	IPX8

Dimensions	Weight
(L)4.19*(D)0.91in (L)106.5*(D)23mm	105g/3.7oz (Including Battery)

** All above specifications are test results based on ANSI/NEMA FL1-2009 Standard. The tests are performed using the battery included in the flashlight.*

BATTERY INSTALLATION

Before first use, please unscrew the body and remove the insulating film. If the battery needs to be replaced, make sure that the positive end of the new battery faces the flashlight head when you put it in.

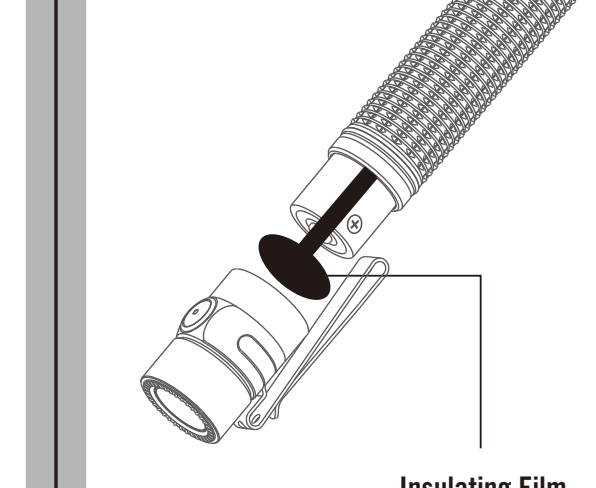

AVAILABLE BATTERIES

- 1 x customized 3500mAh 18650 rechargeable lithium battery

BATTERY LEVEL INDICATOR

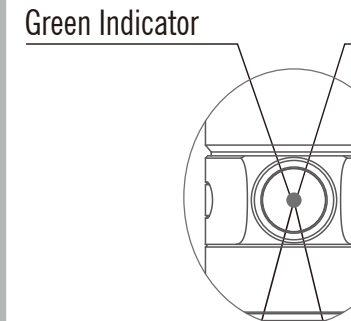

NOTE: If using moonlight mode, the battery indicator will only display when the battery level is below 5%.

USB MAGNETIC CHARGING CABLE -- MCC3

Parameter	Specification
Charging cable	USB type A - magnetic charging connector, length: 0.5m
Input	USB A - Type DC 5V 2A
Charging pattern	CC&CV
Maximum charging current	1.5A
Voltage of fully charged battery	4.2V±0.05V
Time to fully charge	3.5 hours (For reference only. When the USB power source is insufficient to provide 5V 1.5A power capacity, the charging time will be longer)
Charge indication	Red: charging Green: full (over 95%) or disconnected with flashlight

CHARGING

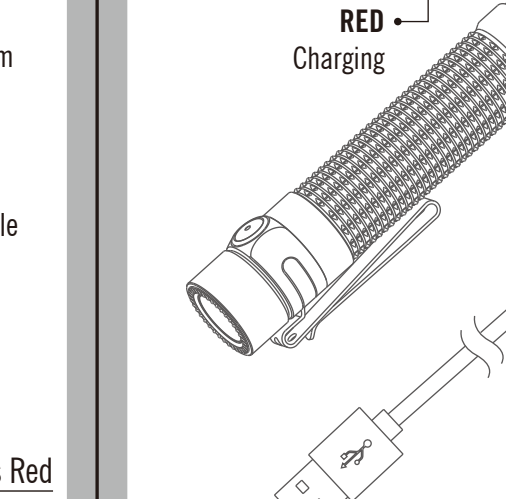

* Before first use please fully charge the product.

* Connect the USB end of the magnetic charging cable to an external USB power source, then attach the other end of the cable to the charging port of the light (best charging efficiency with a 7.5W (5V 1.5A) USB power source). The red indicator means charging, while the green indicator means charging completed (battery level >95%).

* Only charge with standard MCC3, not compatible with other MCC.

DANGER

- DO NOT throw the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
- DO NOT cover the flashlight's head or stand the flashlight on its head when it is on. The radiation energy may cause damage to the flashlight itself, or even result in the burning of flammable objects nearby.

WARNING

- DO NOT activate turbo mode repeatedly under high temperature to prevent the flashlight body from overheating and hurting the user's hand.
- The tail switch may not work while immersed in sea water or other conductive media. Please try to keep it clean and dry.
- DO NOT use Non-protected rechargeable batteries.
- If the product is left unused or carried and transported, please lock the button to avoid accidentally activating the flashlight.

NOTICE

- When the flashlight is turned off, moonlight, low, medium, or high mode will be memorized and become the default mode when the light is turned on again (high mode will only be memorized for 10 minutes. After that, the memorized mode will revert to the medium setting).
- The turbo mode will slowly step down to high mode in 4 minutes in normal temperature.
- DO NOT short-circuit the tail switch cap with the ring surrounding it. The short circuit in this case will result in an electric discharge of below 3mA between them, and may lead to a complete battery drain if it is in this state for too long.

CONTENTS

(EN) English 01
(CHS) 简体中文 02
(FI) Finnish 03
(NO) Norwegian 04
(SV) Swedish 05
(NED) Nederland 07
(PL) Polska 08
(DE) Deutsch 09
(HU)Magyarország 11
(RU) Русский 13
(ES) Español 14
(RO) Romanesc 16
(UA) Ukrainian 17
(JP) 日本語 19
(TH) ไทย 20
(FR) Français 21
(BG) български 23
(IT) Italia 24
(SK) Slovenskýjazyk 26

(EN) English

HOW TO OPERATE

SIDE SWITCH

ON/OFF: Single click the side switch to turn the light ON/OFF. When the light is turned on again, it will return to the previously memorized mode.

CHANGE BRIGHTNESS LEVEL: When the flashlight is on, press and hold the side switch and it will, starting from the present brightness level, automatically cycle through Low, Medium, and High mode. The mode is selected when the side switch has been released. (Please note: moonlight and turbo are not in the automatic cycle).

MOONLIGHT MODE: When the flashlight is off, press and hold the side switch for over one second to access the moonlight mode. If the memorized mode is moonlight, simply click the switch to access it.

TURBO AND RETURN: fast double click on side switch to enter into Turbo, double click again to return. If memory mode were High or Medium, the output is Medium; if memory mode were Low or Moonlight, the output is memory mode.

STROBE: Quickly triple click the side switch to enter the strobe mode. To quit this mode, single click or press and hold the side switch.

LOCKOUT/UNLOCK: When the flashlight is off, press and hold the side switch (for about 2 seconds) to access the button lockout mode (the flashlight will enter the moonlight mode first and will then switch off to signal the lockout mode). Under the lockout mode, press and hold the side switch for less than one second. The red indicator below the side switch will be on for two seconds to signal that the light is still in lockout mode. To unlock it, keep holding the side switch for over one second until the moonlight mode is on again.

TAIL SWITCH

The flashlight produces different output settings by pressing lightly or hard on the tail switch (please refer to the following program configurations).

TWO DIFFERENT PROGRAM CONFIGURATIONS

CONFIGURATION 1 (FACTORY DEFAULT SETTING) : Half press for Medium, hard press for Turbo;

Single press the tail switch (press and release quickly) to turn the flashlight on or off;

Press and hold the tail switch for momentary on. Release to turn off.

CONFIGURATION2: Half press for Turbo, hard press for Strobe, release switch to turn the flashlight off.

SWITCH BETWEEN DIFFERENT PROGRAM CONFIGURATIONS

Switch between configuration 1 and configuration 2 by pressing hard then holding tail switch and single press on side switch at the same time; when you release tail switch, the Configuration will be selected.

(CHS) 简体中文

操作说明

侧按键

开/关机： 单按开、关机。开机时，手电点亮在记忆存储的亮度。

注：模式记忆： 通过侧按键设置或进入的月光档，低档，中档， 高档在关机时存入记忆体(高档仅记忆10分钟后转为中档)，作为下次侧按键开机默认亮度，爆闪与极亮档不记忆；

改变亮度： 开机状态下，长按按键，输出从当前亮度开始，按月光档或极亮档 -> 低档 -> 中档-> 高档-> 低档顺序改变,释放按键……

配置2： 轻按输出极亮……按键释放时手电同步……

配置程序转换

重按尾按键并保持，……和配置2程序之间转换……

(FI) Finnish

KÄYTTÖOHJEET

SIVUKYTKIN

ON/OFF: Sytytä tai sammu… käyttökytkintä kerran. Valo sy… missä se on edellisen kerran…

TEHOTILAN VAIHTAMIEN: … selaa tehotiloja pitämällä s… Tehot selautuvat järjestyks… Vapauta kytkin kun haluam… (Huom. turbo-ja moonlight-… piiriin.)

MOONLIGHT-TILA: Valon … valaisin saadaan kytketty…

(NO) Norwegian

(SV) Swedish

(NED) Nederland

(PL) Polska

(DE) Deutsch

SEITENSCHALTER

EIN- UND AUSSCHALTEN: Drücken Sie den seitlichen …

HECKSCHALTER

(HU) Magyarország

(RU) Русский

(ES) Español

(RO) Romanesc

(UA) Ukrainian

(JP) 日本語

(TH) ไทย

(FR) Français

(BG) Български

(IT) Italia

(SK) Slovenskýjazyk

WARRANTY

Within 30 days of purchase: Contact the original seller for repair or replacement.

Within 5 years of purchase: Contact Olight for repair or replacement.

Battery warranty: Olight offers a one year warranty for all rechargeable batteries.

MCC magnetic USB charging cable : One year.

For any of the fragile or low-value fittings not covered above, like lanyard and clip, you can contact the post-sale in 30 days after the purchase, if it has any quality drawback or damage under normal use condition. If such drawback or damage occurs 30 days after the purchase or under abnormal use condition, we will only offer conditional quality assurance as appropriate.

EU-DECLARATION OF CONFORMITY

EU-Declaration of Conformity can be found here: https://olightworld.com/ec-declaration

USA Customer Support

cs@olightstore.com

Global Customer Support

Customer-service@olightworld.com

Visit **www.olightworld.com** to see our complete product line of portable illumination tools.

OLIGHT

Dongguan Olight E-Commerce Technology Co., Ltd

4th Floor, Building 4, Kegu Industrial Park, No 6 Zhongnan Road, Changan Town, Dongguan City, Guangdong, China.

Made in China

A. 09, 04, 2020
3.0332.6010.9000

THANK YOU!